


TOP AND CABINET PARTS

**For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)**

AUTOMATIC
WASHER

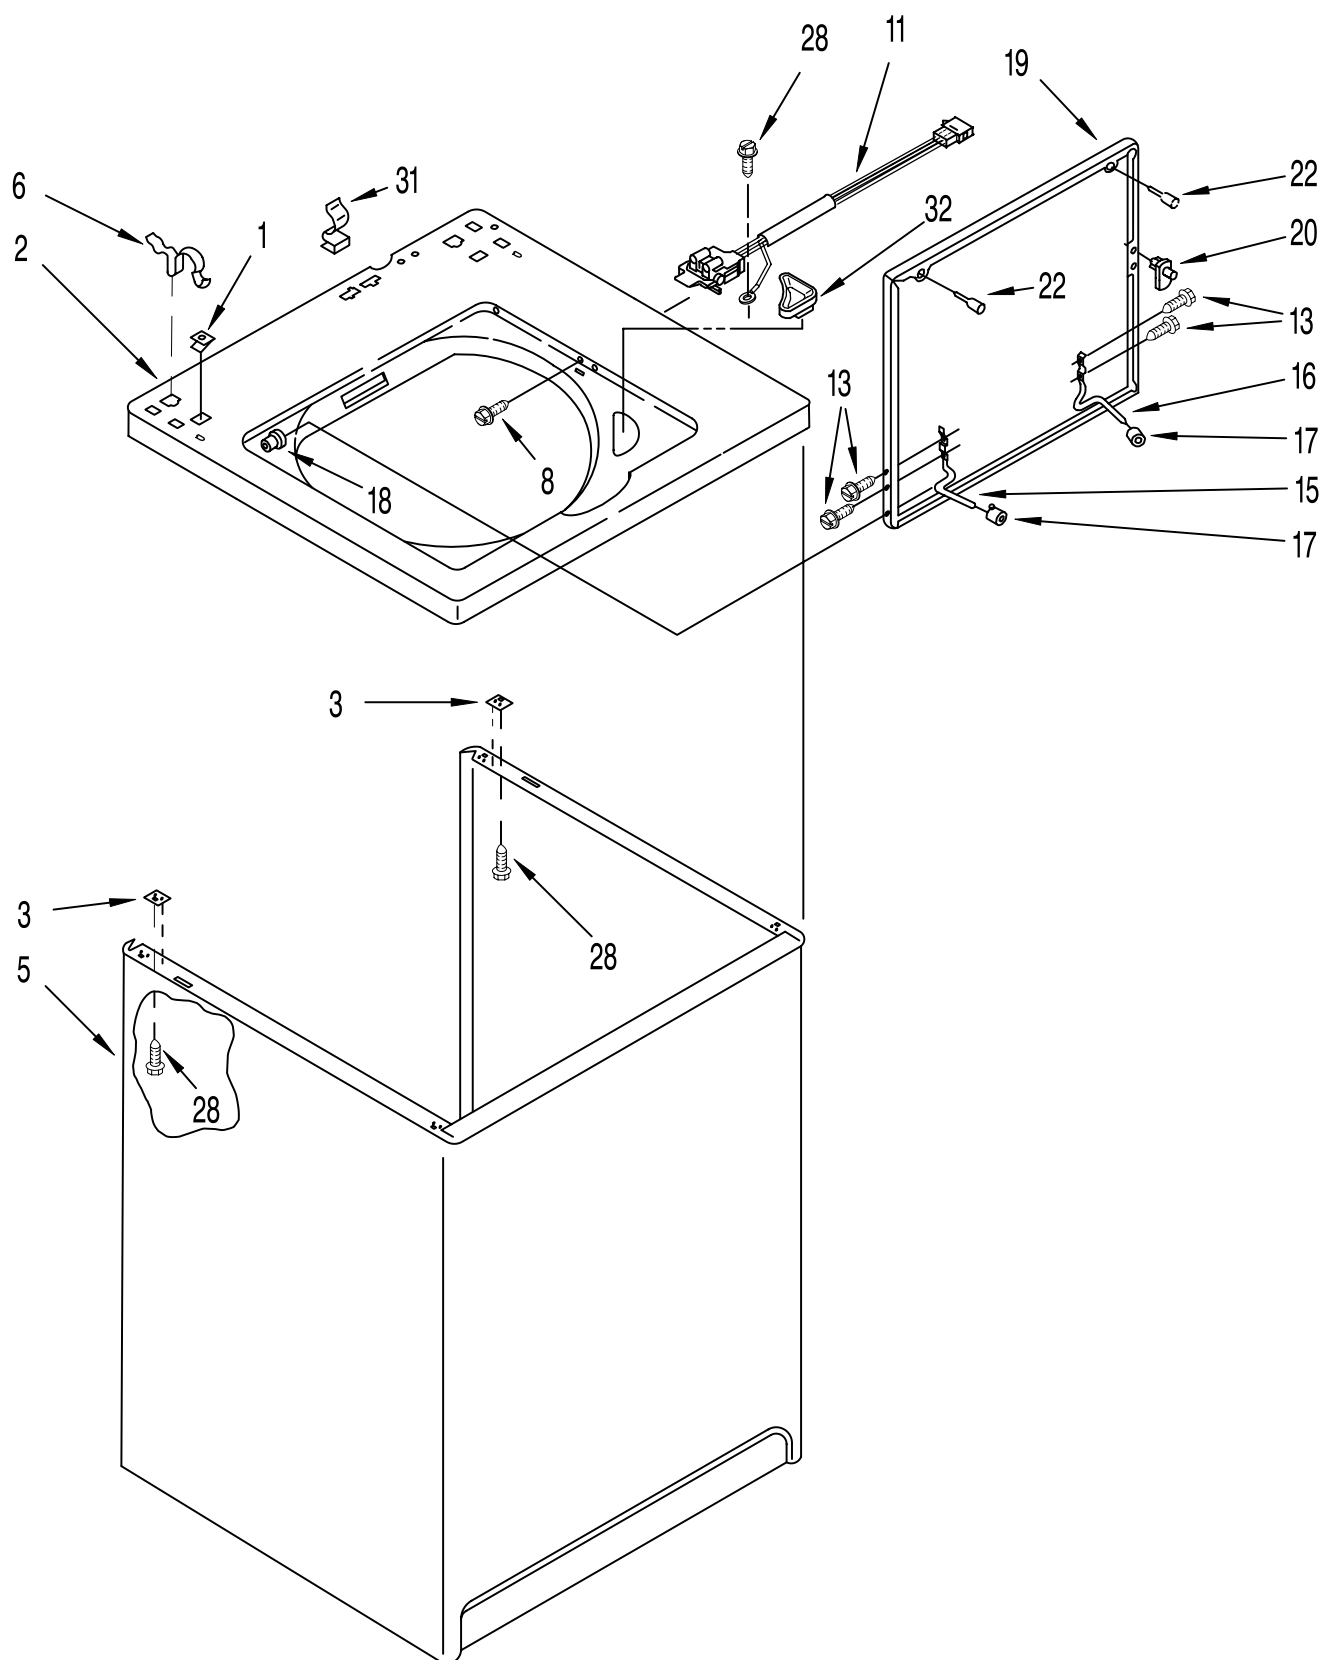

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CABINET PARTS


For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

Illus. No.	Part No.	DESCRIPTION
1	357213	Nut, Push-In (2)
2		Top
	3949476	For White Model
	3949477	For Almond Model
3	62750	Spacer, Cabinet To Top (4)
5		Cabinet
	63424	For White Model
	63425	For Almond Model
6	62780	Clip, Top & Cabinet & Rear Panel (2)
8	3356311	Screw & Washer, Lid Switch (2)
11	3949237	Switch, Lid
13	3351355	Screw, Lid Hinge Mounting (4)
15	54584	Hinge, Lid (L.H.)
16	54583	Hinge, Lid (R.H.)
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19		Lid
	3352718	For White Model
	3352719	For Almond Model
20	358684	Strike, Lid Switch
22	93770	Bumper, Lid (2)
28	384435	Screw, 10-16 x 1/2 (5)
31	90016	Clip, Harness
32	3362952	Dispenser, Bleach

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROLS AND REAR PANEL PARTS

For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

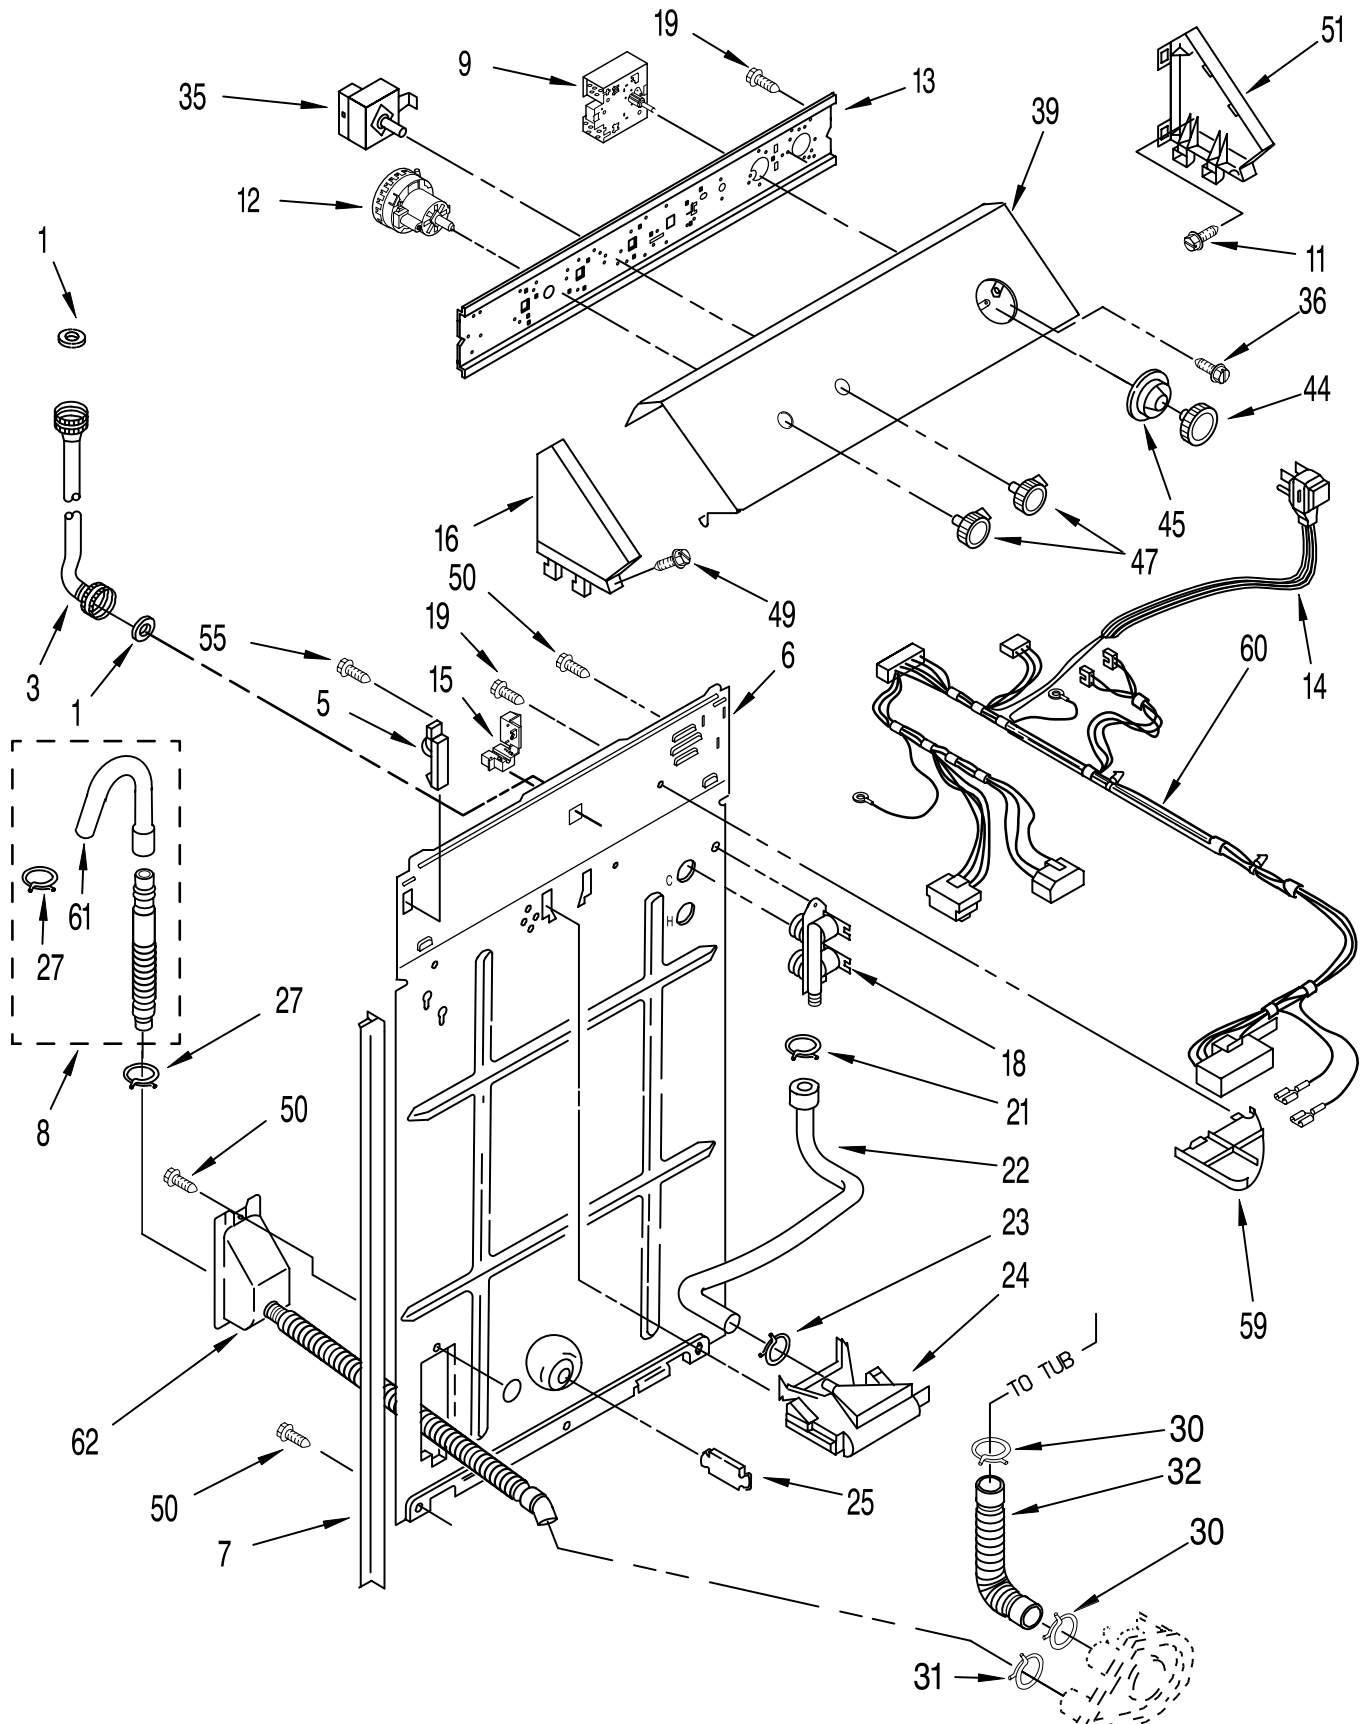

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROLS AND REAR PANEL PARTS

For Models: LSR8300EQ1, LSR8300EZ1

(Designer White) (Designer Almond)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	16123	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)	15	3949468	Strain Relief, Power Cord	44		Knob, Timer
3		Hose, Water Inlet	16		Cap, End (L.H.)		3948580	For White Model
	3949368	(Blue Coupler)		3358528	For White Model		3948582	For Almond Model
	3949369	(Red Coupler)		3358529	For Almond Model	45		Dial, Timer
5	387402	Hinge, Console (2)	18	3952164	Valve, Water Mixing		3950762	For White Model
6	3357978	Panel, Rear	19	90864	Screw, 10-24 x 3/8 (2)		3950763	For Almond Model
7	62747	Pad, Rear Panel	21	370451	Clamp, Hose	47		Knob, Controls
8	3951609	Hose, Drain (4 ft.)	22	3357328	Hose, Vacuum Break		3950759	For White Model
	661577	Hose, Drain (9 ft.)	23	371503	Clamp, Hose		3950760	For Almond Model
		(Not Included)	24	387606	Break, Vacuum	49	388326	Screw, 8-18 x 1.25 (Panel to Top)
	3357090	Extension Drain Hose (21 Inches) (Not Included.)	25	63290	Support, Rear Panel	50	9740848	Screw, 10-16 x 3/8
9	3952404	Timer, Control (60 Hz.) (Motor Not A Service Part)	27	3366912	Clamp, Hose	51		Cap, End (R.H.)
11	90767	Screw 8A x 3/8	30	3363366	Clamp, Hose		3358513	For White Model
12	3366848	Switch, Water Level	31	660628	Clamp, Hose		3358514	For Almond Model
13	3948608	Bracket, Control	32	3950340	Hose, Pump To Tub (Includes #30)	55	487909	Screw, 10-16 x 1/2
14	3949248	Cord, Power (Power Cord Only, Without Harness)	35	661612	Switch, Water Temperature	59	3348424	Shield, Suds
			36	3400808	Screw, Timer Mounting (10-32 x 1) (2)	60	3952443	Harness, Wiring (Includes Power Cord) (For Detail See Page 9 & 10) Also See Clips
			39		Panel, Console	61	3357027	Nozzle-Drain Hose
				3950663	For White Model	62	3361805	Hose-Drain Connector Assy
				3950664	For Almond Model			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS

For Models: LSR8300EQ1, LSR8300EZ1

(Designer White) (Designer Almond)

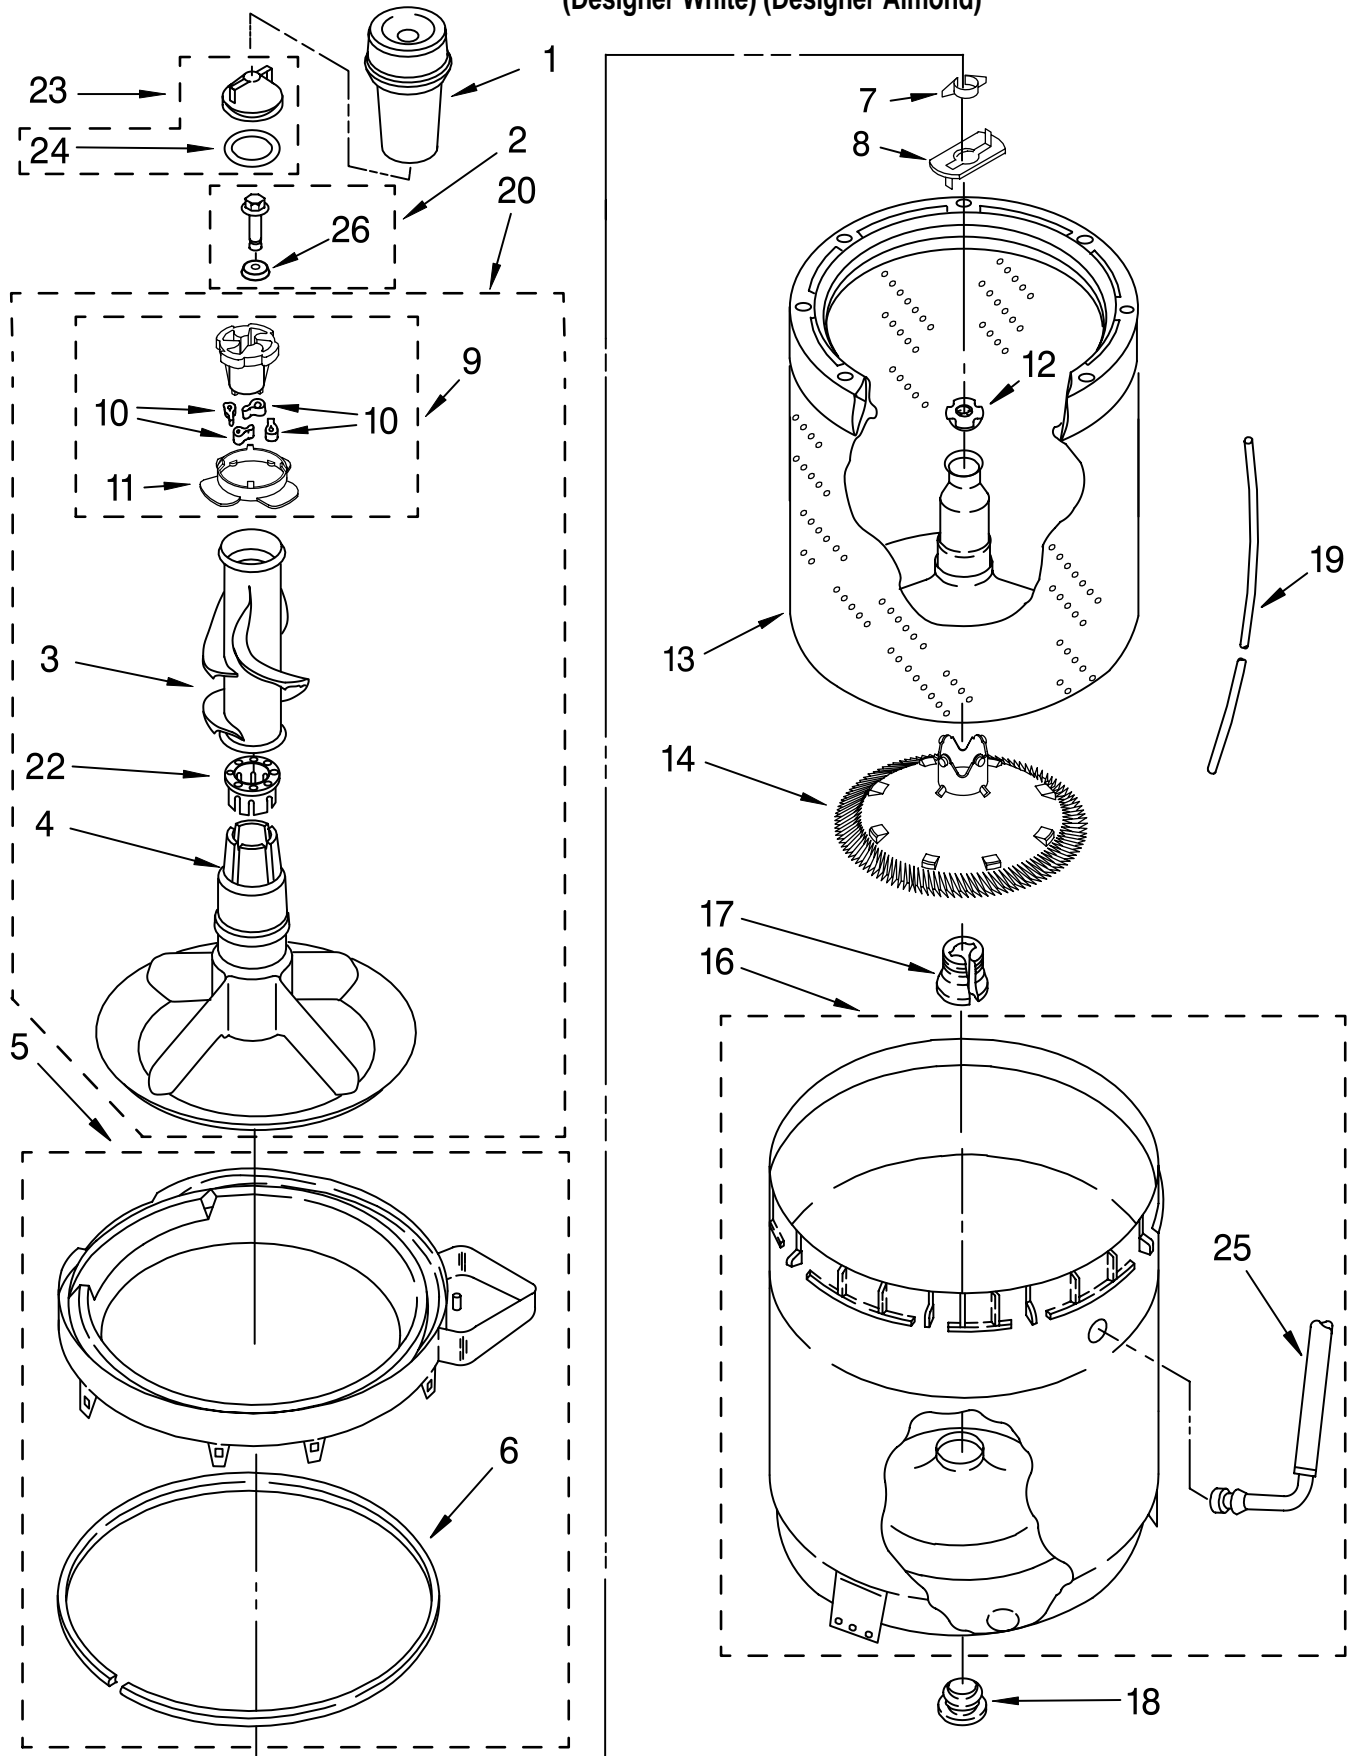

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS


For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

Illus. No.	Part No.	DESCRIPTION
1	63580	Dispenser, Assy.
2	358237	Screw & Washer (5-16-24 x 1)
3	3363003	Clothes Mover
4	3347288	Agitator
5	63851	Tub Ring & Gasket
6	3359585	Gasket, Tub Ring
7	3354845	Clip, Agitator
8	3355921	Washer, Agitator
9	3363663	Cam Driven
10	3366877	Dog, Agitator Clutch
11	3363661	Bearing-Driven Cam
12	21366	Nut, Spanner
13	3951989	Basket & Balance Ring
14	3361948	Filter, Plate
16	388893	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure Switch
20	3946501	Agitator (Complete Asy.)
22	3350389	Spacer, Thrust
23	3354733	Cap, Barrier
24	3348855	Seal, Inner Cap
25	3948705	Hose, Bleach
26	3949550	Washer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS

For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

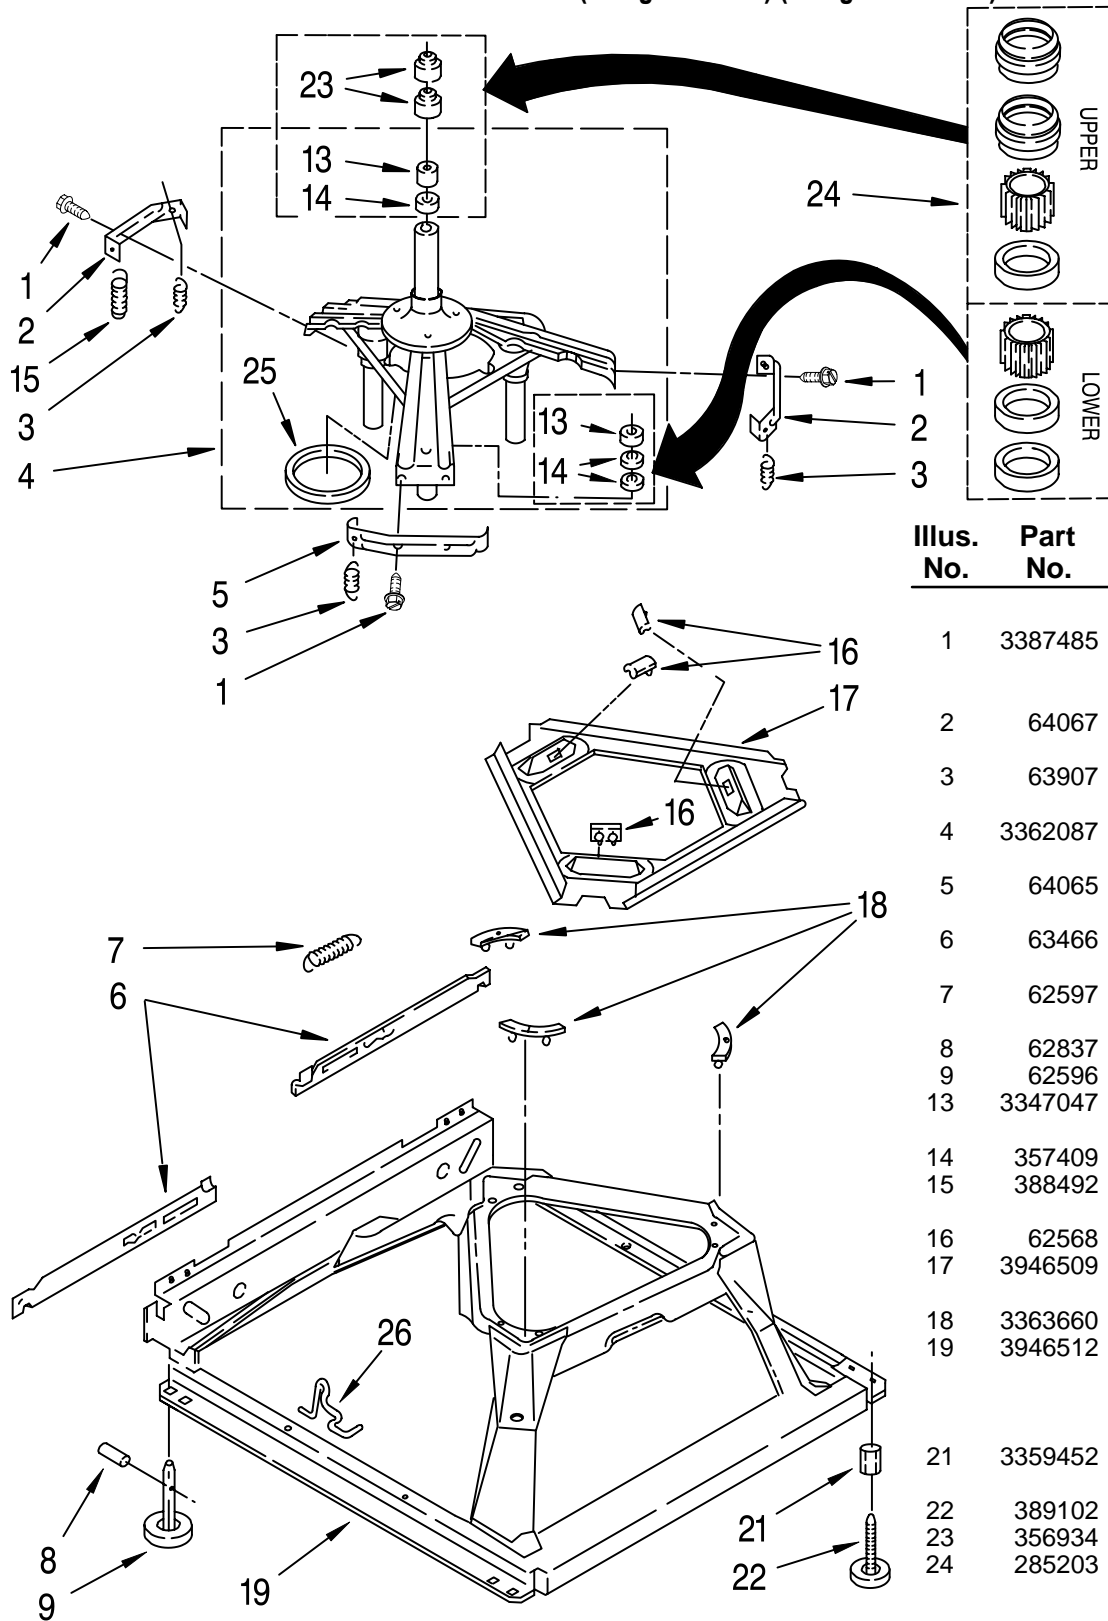


Illus. No.	Part No.	DESCRIPTION
1	3387485	Screw, Bracket Mounting (10-16 x 5/8)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring Suspension,(3)
4	3362087	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	388492	Spring, Counterweight
16	62568	Pad, Plate
17	3946509	Plate, Suspension (Includes Illus. 16)
18	3363660	Pad, Base
19	3946512	Base Assembly (Includes Illus. 6, 7, 8, 9, 16, 17, 18, & 26)
21	3359452	Nut, Lock (3/8-16) (2)
22	389102	Foot, Front (2)
23	356934	Seal, Centerpost (2)
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS


For Models: LSR8300EQ1, LSR8300EZ1

(Designer White) (Designer Almond)

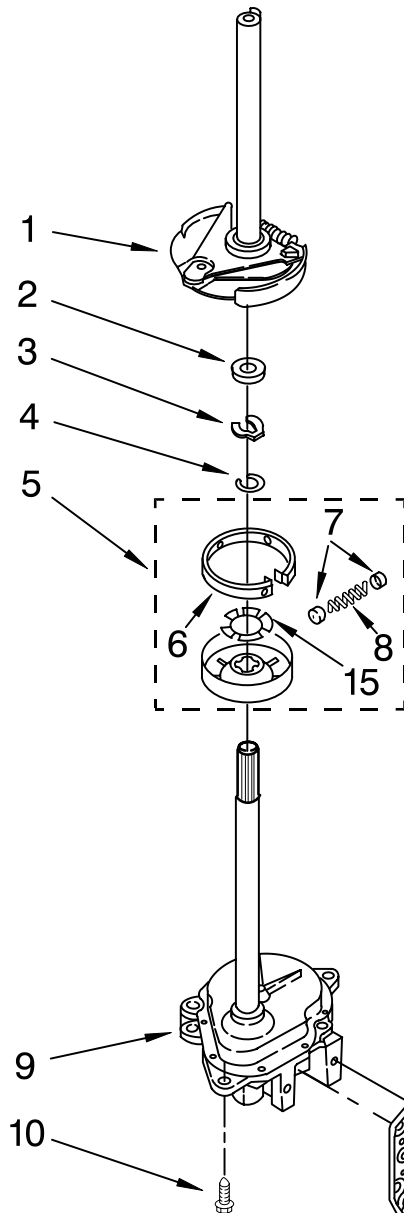

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake & Drive Tube (Complete) (Refer to Page 11 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3951303	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer To Page 12 For Further Breakdown)
10	3357334	Screw, Gearcase To Base (3)


Illus. No.	Part No.	DESCRIPTION
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	3364003	Coupling, Motor & Isolation
15	3355454	Clip, Anti-Rattle
16	3357334	Screw
17	3349637	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	3352287	Motor, Main Drive
20	62850	Switch, Main Drive Motor
21	62700	Retainer, Pump (2)
22	3363394	Pump (Complete)
23	3387485	Screw, 10-16 x 5/8
24	3946532	Shield, Motor
25	9740848	Screw, 8-18 x 1/2
26	661605	Capacitor
27	357030	Clamp, Capacitor

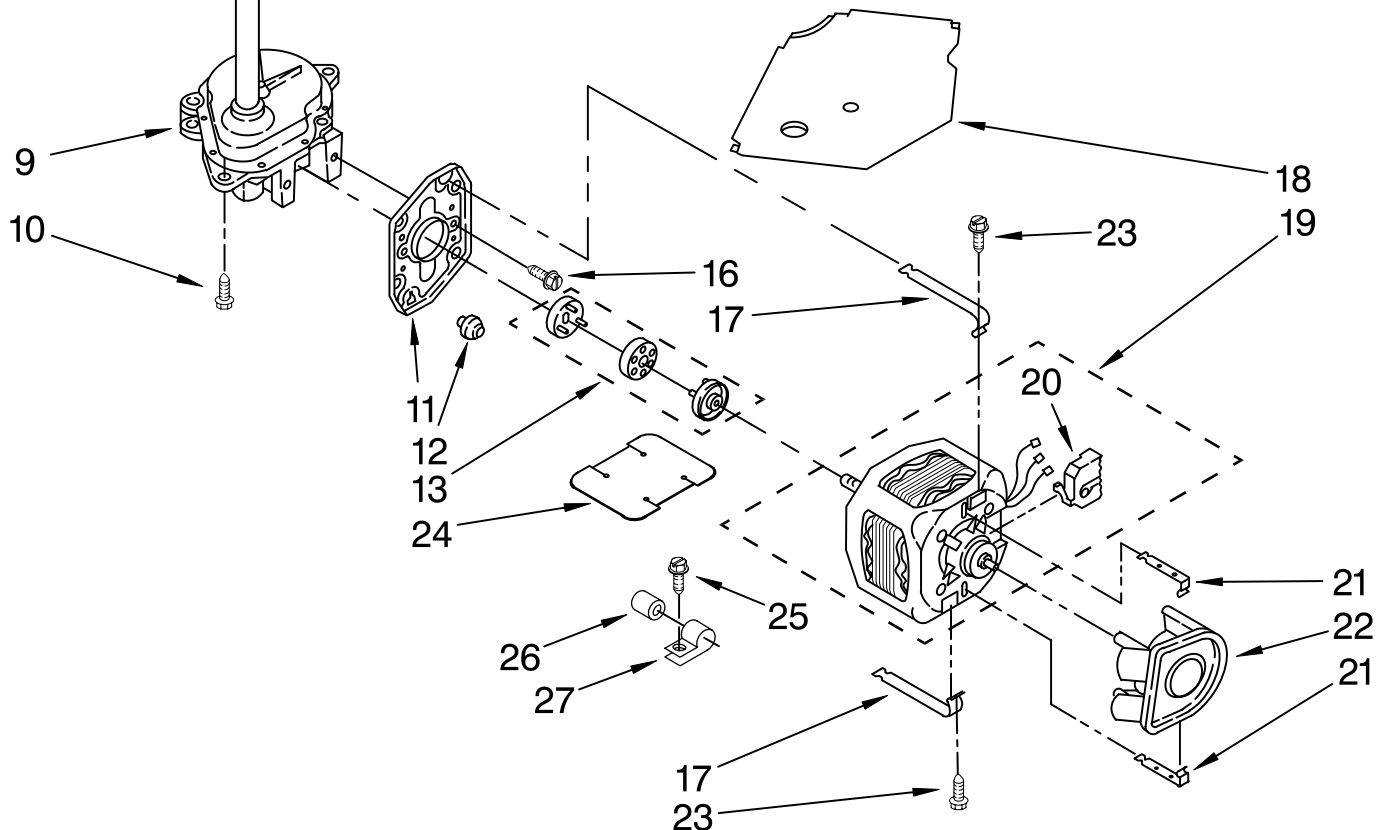

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

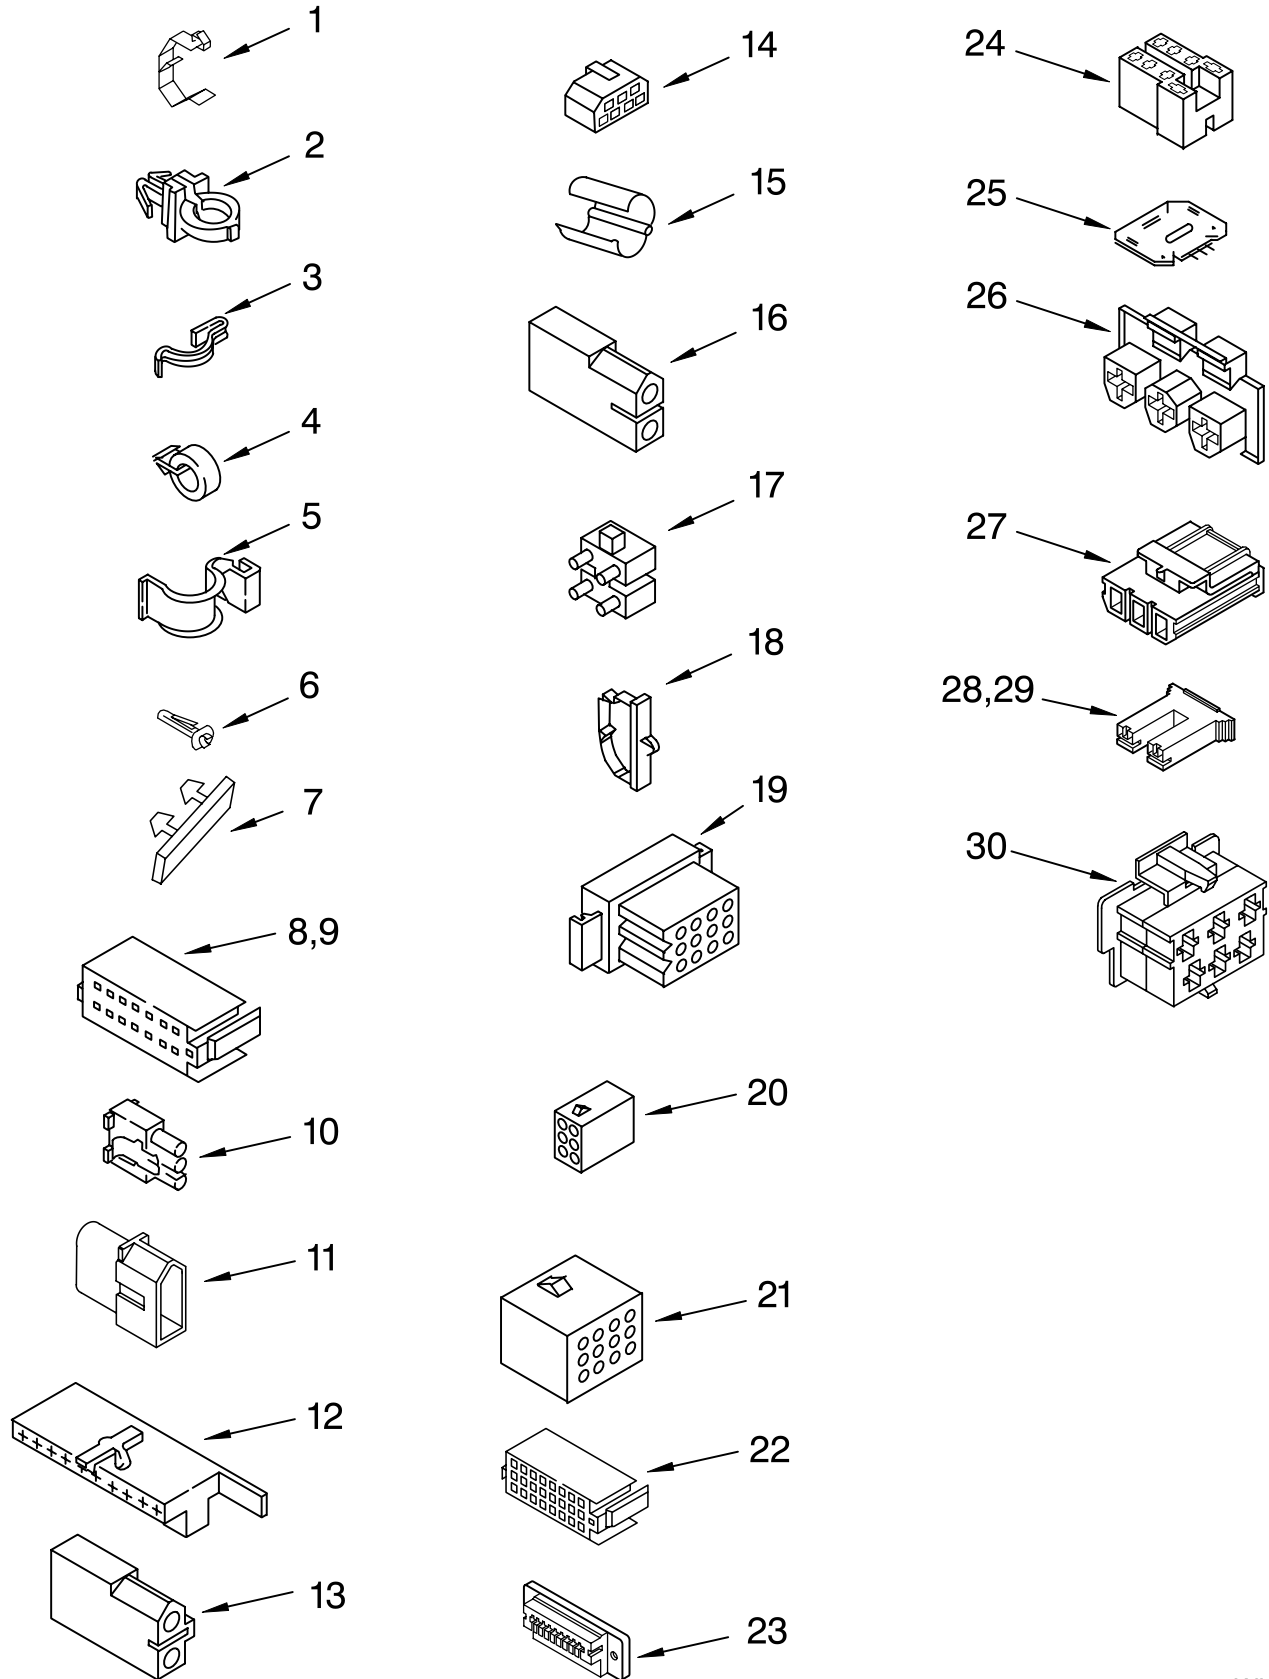

WH2G

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3349557	Clip, Harness	13	3348075	Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.)	23	3349494	Connector, Etc
2	388498	Clip, Harness				24	60687	Connector, Relay (Use Term.308569)
3	3347812	Clip, Harness				25	3407125	E.T.C. Control
4	3352501	Clip, Harness	14	3347243	Block, Disconnect (Use Term. 352088)	26	3948617	Connector (T.P.A.) (3-Circuit) (Lid Switch) (Use Term. 3948619 OR 3948620.)
5	90016	Clip, Harness	15	63523	Protector			
6	3390496	Clip, Harness	16	717252	Connector (2-Way) (Use Term.94614)	27	3360056	Connector (T.P.A.) (3-Circuit) (Pressure Switch) (Use Term.3948619 OR 3948620.)
7	389379	Retainer, (Suds Models)						
8	352090	Timer, Block Disconnect (White)	17	387566	Plug, Terminal (4-Way) (Power Cord) (Use M3 Screws)	28	3354925	Block, Connector (Cold Valve) (Use Term.693217)
9	352089	Timer, Block Disconnect (Black)	18	3352944	Clip, Harness	29	3354926	Block, Connector (Hot Valve) (Use Term.693217)
10	62889	Receptacle, Terminal (3-Way) (Lid Switch) (Use Term.94613) Or 94614.)	19	3390423	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)	30	3948615	Connector (T.P.A.) (6-Circuit) (Temp. Switch) (Use Term.3948619 OR 3948620.)
11	353424	Plug, Terminal (3-Way) (Power Cord) (Use Term.94613)	20	3347730	Receptacle (6-Way) (Use Term. 94613)			
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	21	388818	Plug, Terminal (12-Way) (Use Term. 94613 Or 94614.)			
			22	3369366	Timer, Block Disconnect (Black) (Amp) (Use Term.3369365)			

**FOR COMPLETE WIRING HARNESS REFER TO
CONTROL AND REAR PANEL PARTS PAGE**


WH2G

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BRAKE AND DRIVE TUBE PARTS

For Models: LSR8300EQ1, LSR8300EZ1

(Designer White) (Designer Almond)

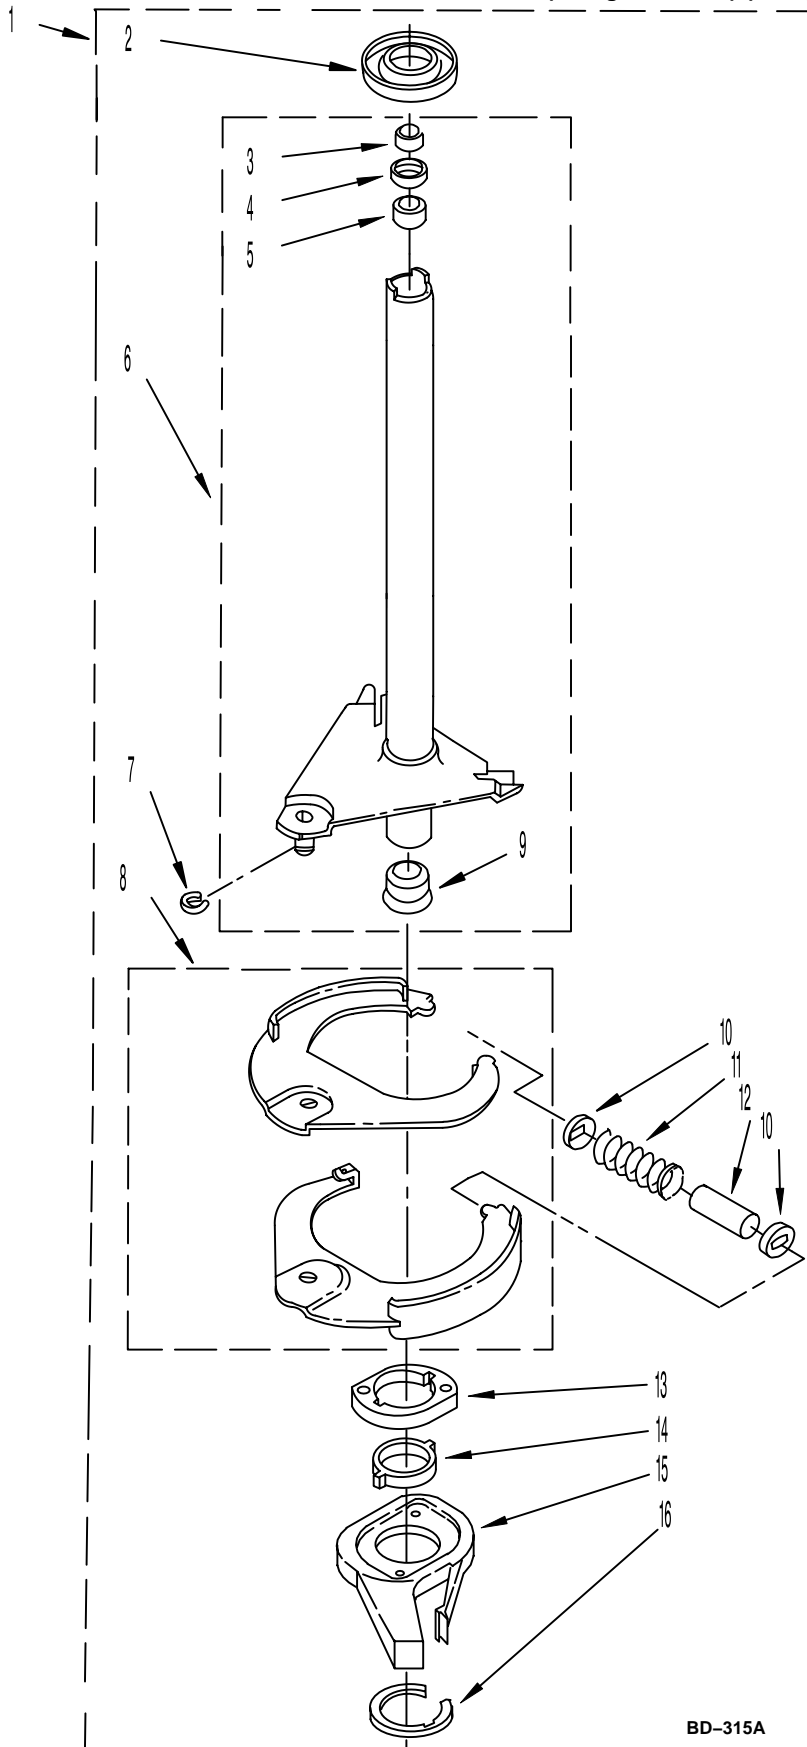

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED


285208 Lubricant
(Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: LSR8300EQ1, LSR8300EZ1

(Designer White) (Designer Almond)

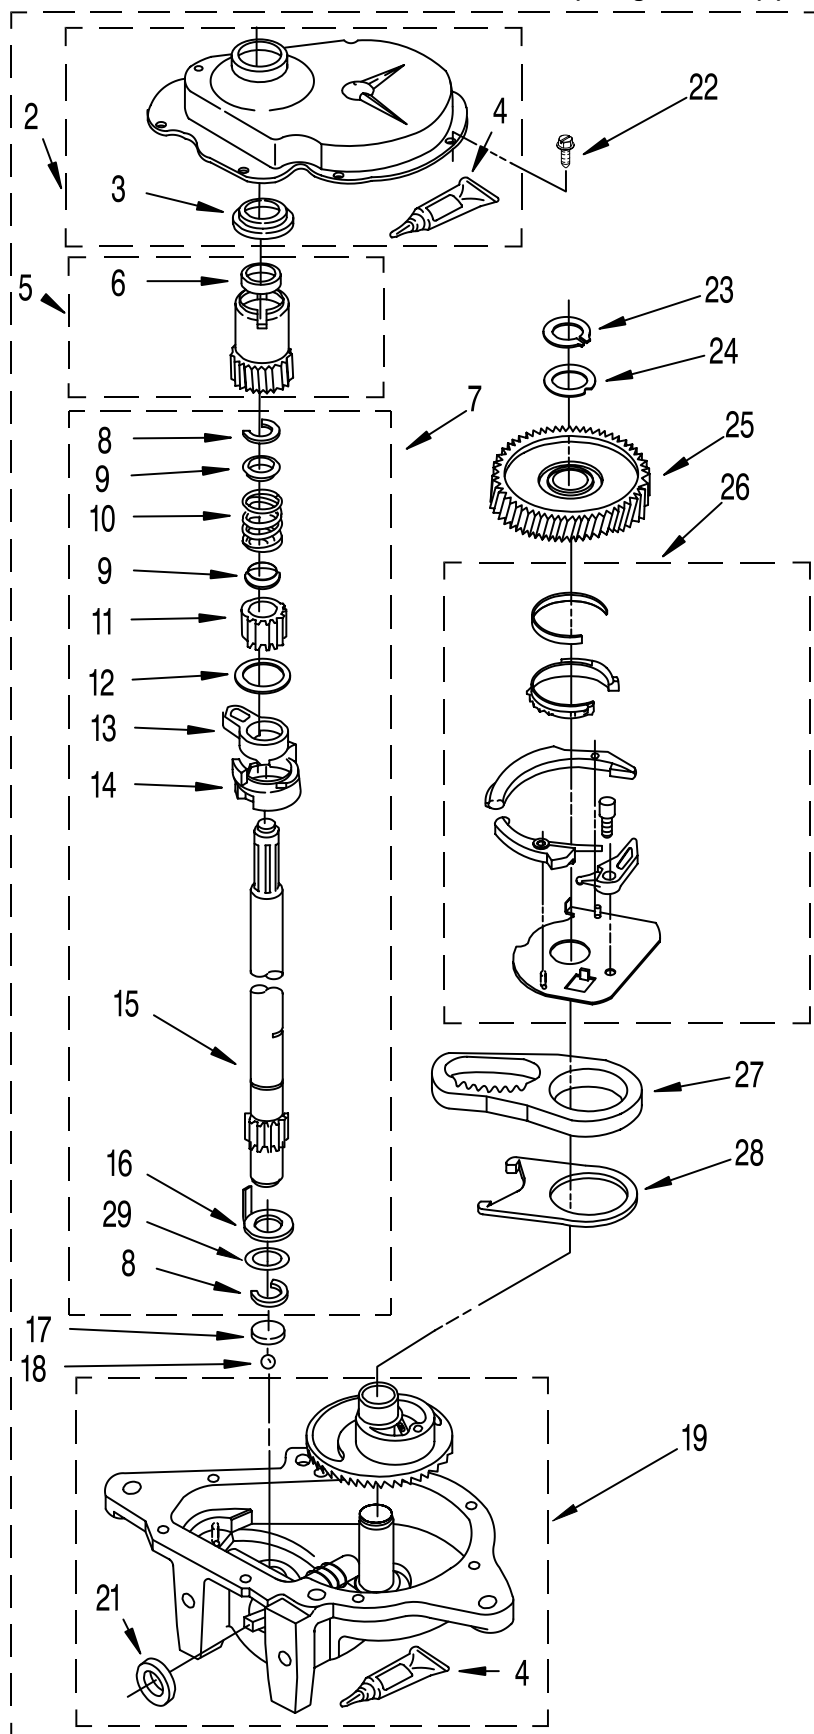


Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

GC-215C

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS

For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

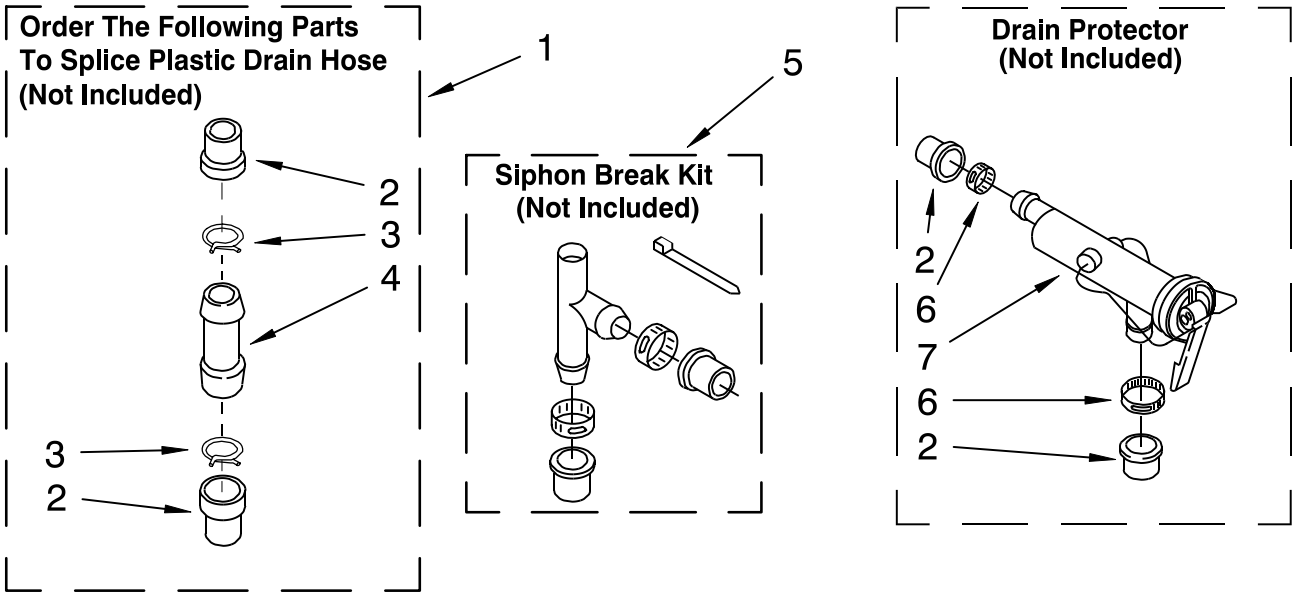


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: LSR8300EQ1, LSR8300EZ1
(Designer White) (Designer Almond)

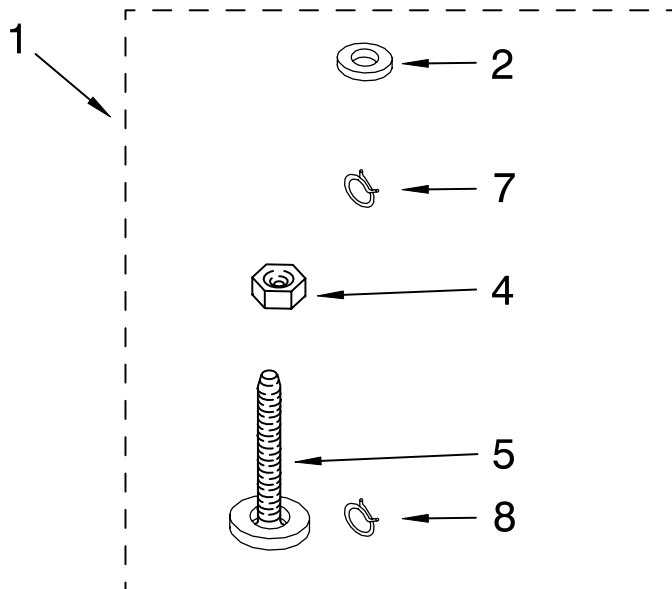

Illus. No.	Part No.	DESCRIPTION
1	3976252	Miscellaneous Parts Bag
2	16123	Washer, Inlet Hose (1-1/16 x 5/8) (4)
4	3359452	Nut, Lock (3/8-16)
5	389102	Foot, Front (2)
7	3366912	Clamp, Hose
8	3366913	Clamp, Hose

LITERATURE AND OPTIONAL PARTS

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

LITERATURE PARTS

LIT3949145 Installation, Instructions
LIT3950310 Guide, Use and Care
LIT3952109 Energy Guide
LIT3952406 Label, Wiring Diagram

Following May Be Purchased

DO-IT-YOURSELF REPAIR MANUALS

LIT4313896 Manual, (Washer) Do-It-Yourself

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

OPTIONAL PARTS NOT INCLUDED

PAINT, TOUCH-UP (1/2oz.)

72017 White
72107 Almond
72110 Golden Harvest

PAINT, PRESSURIZED SPRAY (13 oz.)

350938 Primer, Gray
350930 White
350956 Almond
261890 Golden Harvest

PAINT, BULK (1 qt.)

799344 White (Uncut)
978883 Almond (Uncut)
261891 Golden Harvest (Uncut)

OIL

350572 Oil, Gearcase (16 Oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

LUBRICANT

285208 Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

SEALER

285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)

SHIPPING KIT

3348675 Shipping Kit

ACCESSORY PARTS

89121 Stand-Pipe Kit
367031 Drain Protector
285320 Siphon Break Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST